## **LOCATE SERIAL NUMBER**

TIP: Use included stylus with touch screen to ensure accurate selections

## Follow the steps below



CALIBRATIONS DIAGNOSIS UPDATES PARAMETERS

BACK

UTILITY

Administratory
19/10/2018

HOME
18F0

## Select SETUP



Select **UTILITY** 



Select **MACHINE DATA** (page over to see this selection)

Serial numbers are displayed here. First serial number is the **CONSOLE**, Connected machine serial number is the **MACHINE**