

994 LASER

QUICK-START GUIDE



CONTENTS

- Machine Registration
- Powering Up Machine
- Login/Password Entry
- Important Tips
- Jaw Setup - High Security
- Cut by Code - High Security
- Jaw Setup - Edge Cut
- Cut by Code - Edge Cut
- Cut by Decode
- Cutter Replacement
- Tracer Replacement
- Jaw Setup -Tibbe
- Cut by Code - Tibbe
- Software Update Instructions
- Replacement Parts List



HIGH SECURITY



EDGE CUT



6-CUT TIBBE



*** IMPORTANT ***

REGISTERING YOUR MACHINE

Thank you for your purchase of the Keyline 994 Laser.

Before continuing with machine setup and use, please complete the following;

COMPLETE PRODUCT REGISTRATION FORM

Complete enclosed form and fax to 216-803-0202 or e-mail to info@keyline-usa.com. This information is required to activate your warranty and inform you of software updates and new products.


KEYLINE USA PRODUCT REGISTRATION FORM

IMPORTANT
Please complete this form and fax to 216-803-0202 or email to info@keyline-usa.com so that we can register your product and activate your warranty.

Business Name _____
Customer Name _____
Address _____
City _____
State _____ Zip _____
Email _____
Product (i.e. 106, 303, Laser 994, 684) _____
Serial Number _____
Distributor Purchased From _____
What other key machines do you own?
Please list _____

Would you like added to our quarterly e-newsletter? _____

 **KEYLINE USA**
Manufactured by Design | Sales Office
10000 W. 130th Street, Suite 100
Cleveland, OH 44130

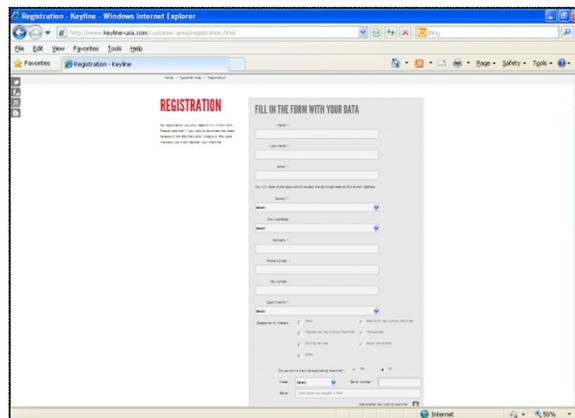

The screenshot shows a web browser window titled "Registration - Keyline - Windows Internet Explorer". The address bar shows "http://www.keyline-usa.com/customer-area/registration.html". The page content includes a "REGISTRATION" heading and a "FILL IN THE FORM WITH YOUR DATA" section. The form fields include: Name, Last Name, Email, Phone, Product (dropdown), Serial Number, and Distributor (dropdown). There are also checkboxes for "I agree to the terms and conditions" and "I would like to receive e-newsletters".

REGISTER YOUR MACHINE ON THE WEB

Visit **Customer Area** on www.keyline-usa.com then select the **Registration** section. Complete the online form and register each machine you own with the respective serial numbers. Once complete your profile will be set up.

PLEASE NOTE: YOU MUST REGISTER YOUR MACHINE ONLINE TO HAVE ACCESS TO SOFTWARE UPDATES, MANUALS & QUICK START GUIDES.

TURNING MACHINE ON/OFF


Cable Connection & Powering Machine ON

***MOBILE USERS: YOU MUST USE A PURE SINE WAVE INVERTER WITH 1100 WATTS (or greater) TO POWER THE MACHINE OR MACHINE MOTOR WILL NOT WORK PROPERLY**

NOTE: Do Not Install Jaw Until Instructed on Page 4 of this Guide

1. Attach the 9-pin connector cable to the port on the **LEFT SIDE** of the console **AND** to the back of the machine. **SECURE WITH ATTACHED SCREWS.** Also, connect the black cable to the console and the back of the machine.
2. Attach power cord to back of machine and plug into a properly grounded outlet.
3. Make sure the ON/OFF switch above the power cord is to the ON position.
4. Rotate the Emergency Stop button towards the back of the machine until it releases outward.
5. The machine will now begin to start-up. **This process can take up to 4 minutes.** Proceed with LOGIN (page 2).


Powering Machine OFF

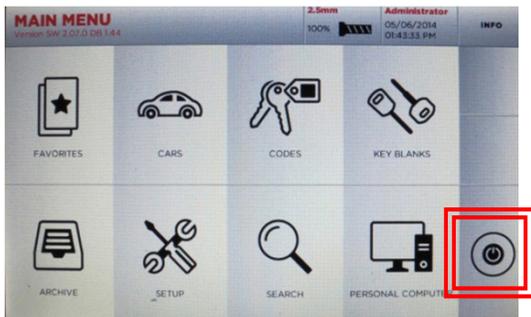


At **MAIN MENU**, select **Power button**



Select **YES** to log out, then select Power button again at Login screen

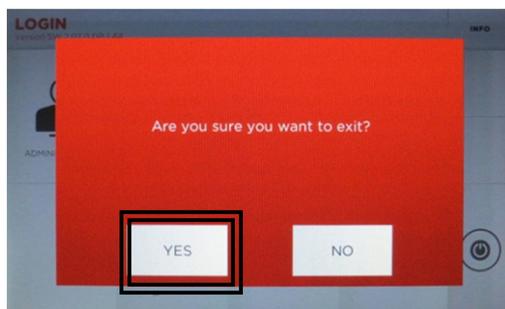


Select **YES** to exit

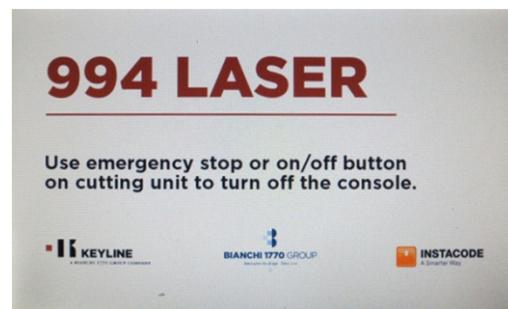


LOGIN / PASSWORD ENTRY

TIP: Use included stylus with touch screen to ensure accurate selections


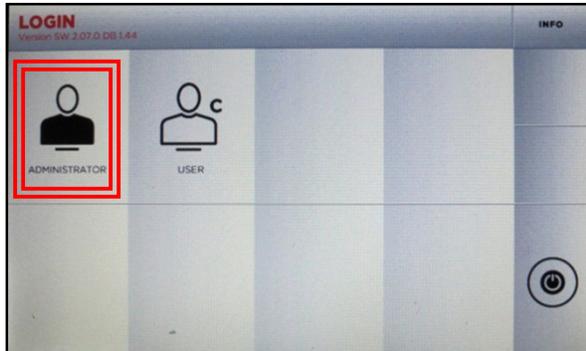


Select **ADMINISTRATOR**

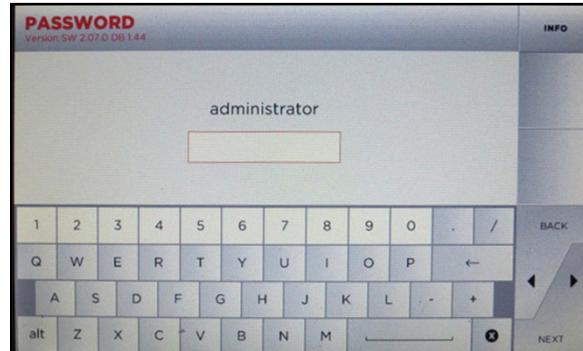

Leave password screen blank, no default password is set, Select **NEXT**.
To create password, see below.

PASSWORD CREATION (OPTIONAL) -Skip this section if you do not want a password-

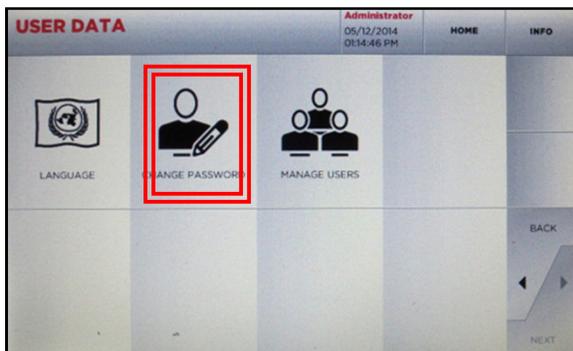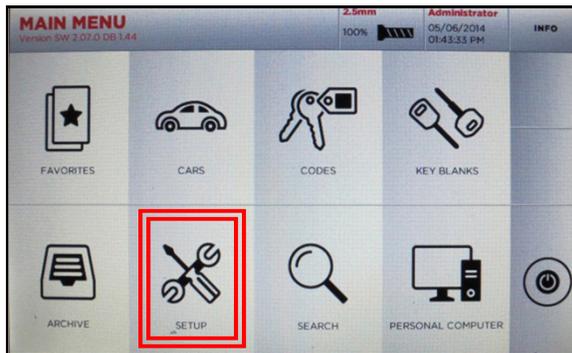

From Main Menu, Select **SETUP**, then **USERS** and then **CHANGE PASSWORD**.
At the Change Password screen **enter in your new password and confirm** (leave Old Password line blank) then select **NEXT**. Administrator password is now set.

IMPORTANT

COMPLETE JAW SETUP

Before using the machine to cut any keys, please **SETUP ALL THE JAWS** using the template (silver template with the key ring on one end) found in the black accessory case. Follow the directions on page 4 of this guide for high security and page 7 for edge-cut.

This adjustment is necessary due to fluctuations and changes that have occurred during shipping. Failure to follow this procedure correctly may cause damage to the tracer, cutter, and/or jaw and may result in voiding any warranty.

CUTTER LIFE & KEY MATERIAL

Cutting steel keys is not recommended with the 994. Cutter life will be drastically reduced and/or cutter damage may occur. In addition, the 994 cannot cut or decode any type of plastic key.

USE OF AFTERMARKET SPARE PARTS

Keyline machines require the use of factory original parts. Aftermarket cutters, tracers and adaptors are not recommended and may cause product damage that will void your machine warranty.

POWERING MACHINE OFF

For best performance, power down the machine when not in prolonged use (i.e. over night).

MACHINE PACKAGING

Please retain all machine packaging for transportation purposes. Packaging is specially designed to safely transport the machine and it's components.

WARRANTY INFORMATION

In Warranty (within 90 days of purchase): Customer will return machine and Keyline USA will reimburse shipping charges. Keyline USA will pay the return shipping back to the customer


In Warranty (91+ days of purchase): Customer will pay to return the machine to Keyline USA. Keyline USA will pay the return shipping back to the customer

Out of Warranty: Customer will pay to return the machine to Keyline USA. Customer will pay the return shipping back to the customer

TEMPERATURE

Machine operating temperature is between 32 and 104 degrees Fahrenheit.


JAW SETUP – HIGH SECURITY

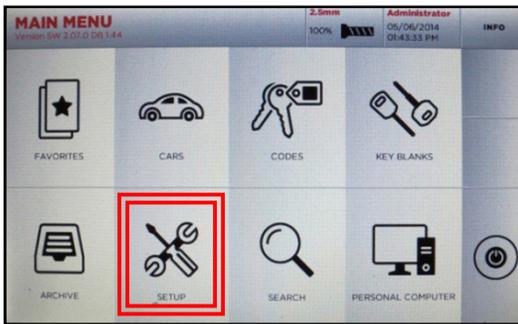


Select **SETUP**




Select **CALIBRATIONS**

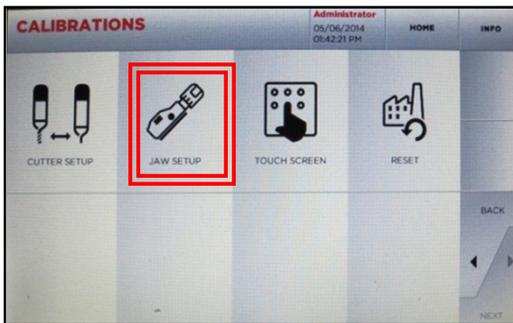

Select **JAW SETUP**

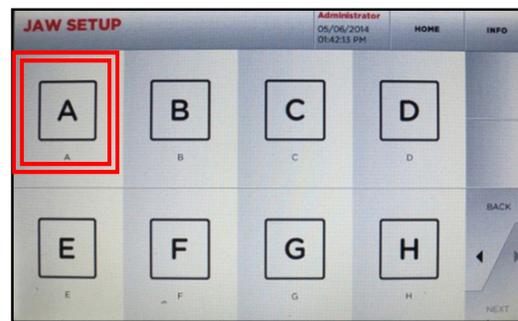

Select desired jaw (**A, B, C, D**)

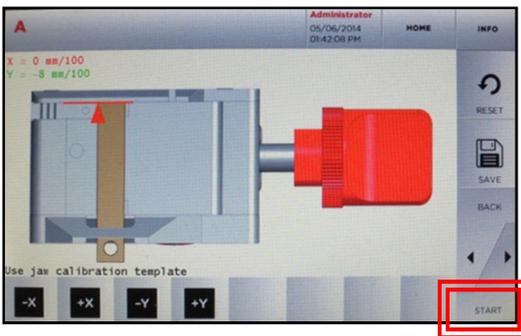


Install Jaw to far left of carriage until it stops. **CLAMP TIGHT WITH JAW LEVER.**

Insert jaw calibration template (metal bar with key ring in accessory kit). Hold blank **FLAT** in jaw & press in and down while tightening. Press **START**, then **OK** to begin calibration.


Calibration Complete screen displays. Select OK. Note values for X & Y. – Record setup numbers then do a second Jaw Setup. Select START to begin. Compare the setup numbers to first set. If they are within +/- 2 of original numbers*, Jaw Setup is complete. Press SAVE. Then select YES to confirm. Remove silver template. (* if values are not within range, run third Jaw Setup and compare 2nd & 3rd setup numbers.)

CUT BY CODE – HIGH SECURITY


TIP: Before key cutting, make sure you have the correct key blank on hand. Cutting a test key is also recommended on first key cutting to verify jaw is calibrated correctly.

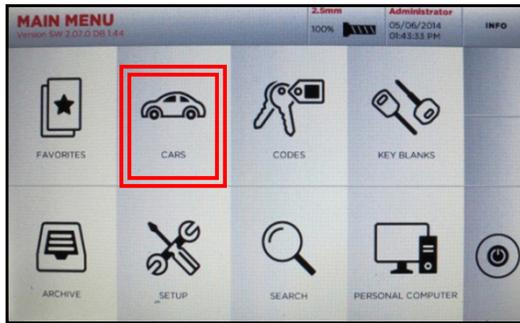

Select **CARS**

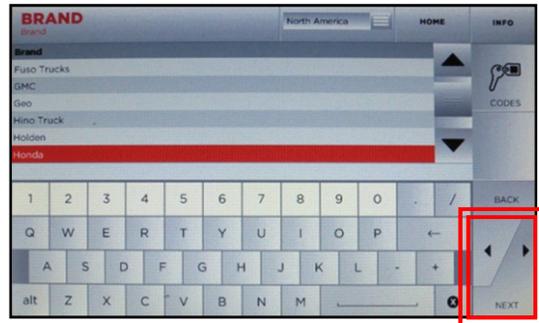


Select **BRAND (MAKE)**, then NEXT

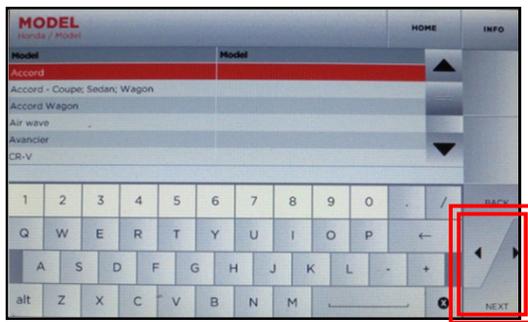


Select **MODEL**, then NEXT




Select **YEAR RANGE**, then NEXT

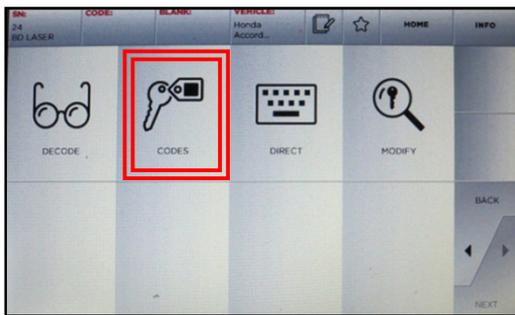


Select **CODES**, then select NEXT

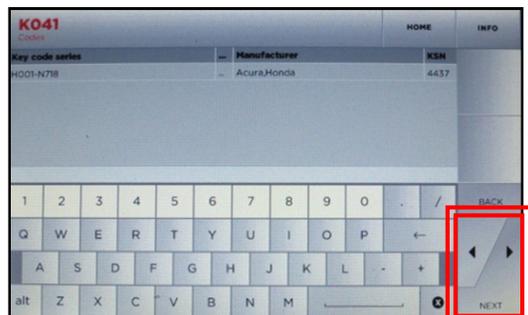


Enter code, (i.e. K041), select NEXT

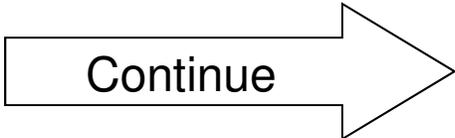


CUT BY CODE – H.S., cont.

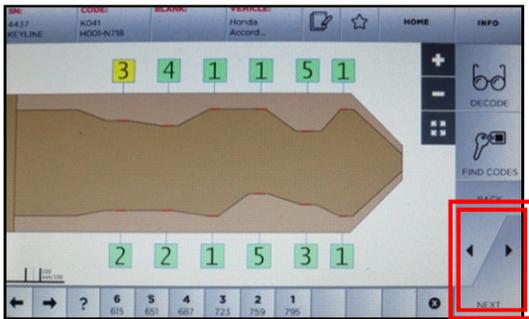

Key depths appear, select **NEXT**

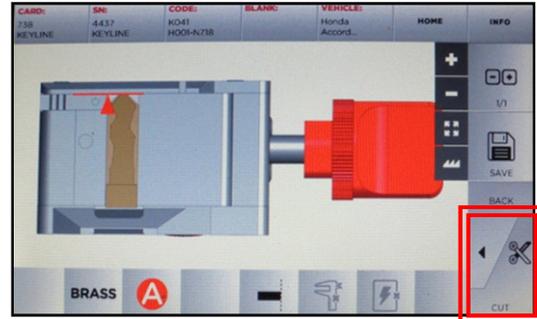


Insert key correctly on jaw, paying close attention to the stop position for the key blade, then select **CUT**

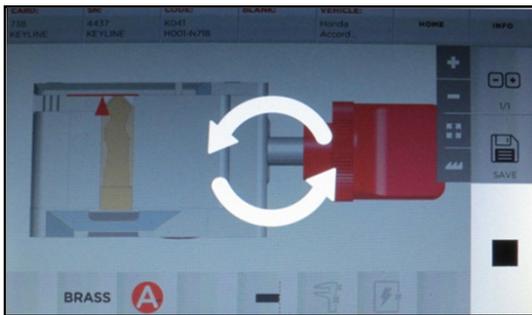

Key cutting in progress




Rotate key for second side cutting, Select **OK**

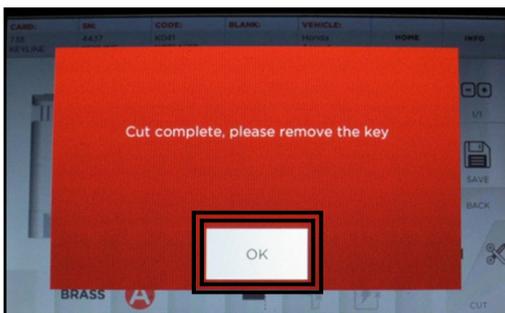

Key Cutting complete. Select **OK**.
Select **HOME** button at top of screen to go back to Main Menu or press **CUT** again to make additional keys.

JAW SETUP – EDGE CUT (G)

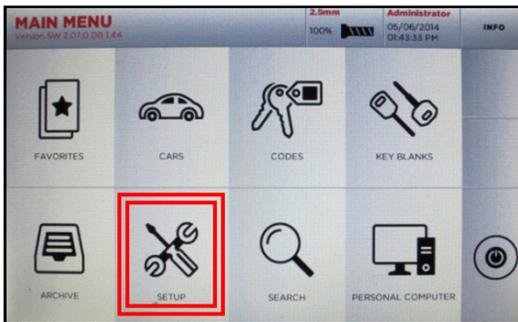


Select **SETUP**




Select **CALIBRATIONS**



Select **JAW SETUP**

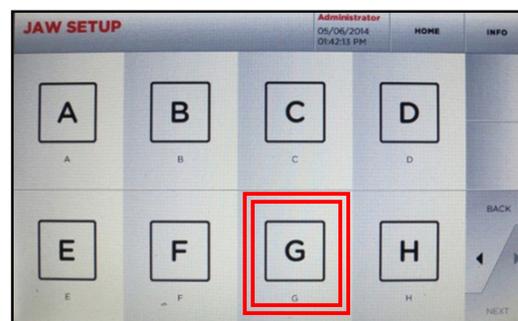

Select **G** jaw

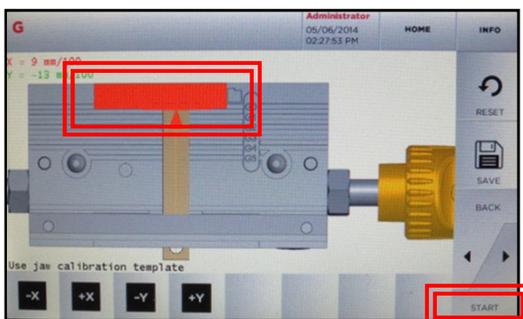


Install Jaw to far left of carriage until it stops. **CLAMP TIGHT WITH JAW LEVER.**

Insert tip stop as shown, then insert jaw calibration template (metal bar with key ring in accessory kit). Hold blank **FLAT** in jaw & press in and down while tightening. Press **START**, then **OK** to begin calibration.


Calibration Complete screen displays. Select **OK**. Note values for **X & Y**. – Record setup numbers then **do a second Jaw Setup**. Select **START** to begin. Compare the setup numbers to first set. If they are **within +/- 2** of original numbers*, Jaw Setup is complete. **Press SAVE**. Then select **YES** to confirm. Remove silver template. (* if values are not within range, run third Jaw Setup and compare 2nd & 3rd setup numbers.)

CUT BY CODE – EDGE CUT


SWITCHING TO G JAW FROM A/B/C/D JAWS

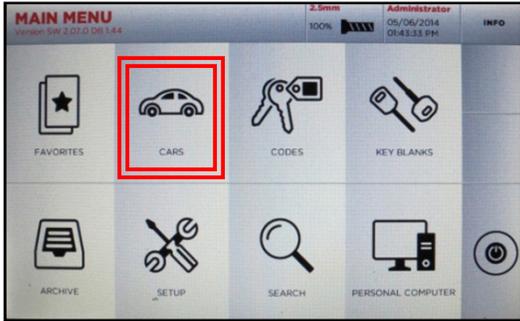


Select **CARS**

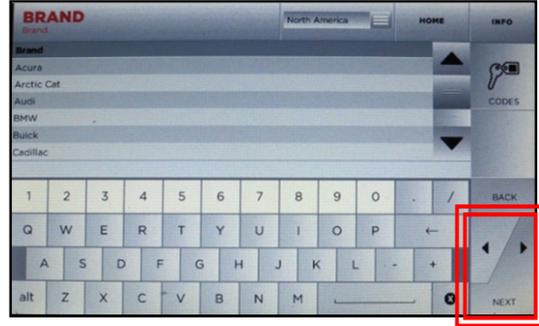


Select **BRAND (MAKE)**

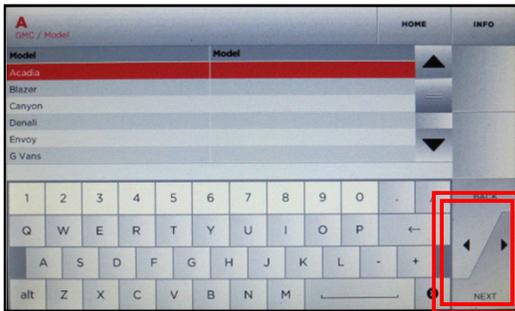


Select **MODEL**

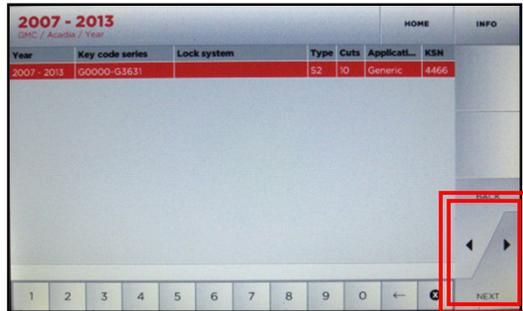


Select **YEAR**

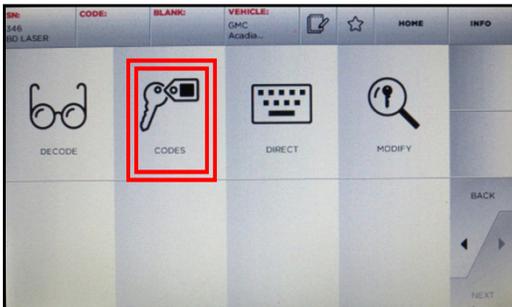


Select **CODES**

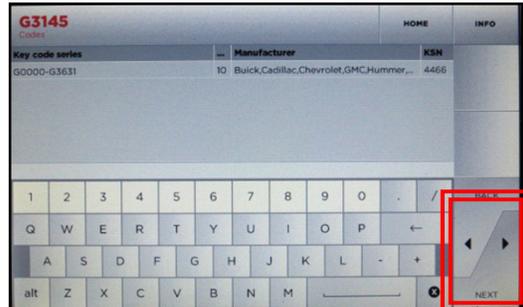

Enter code and select **NEXT**

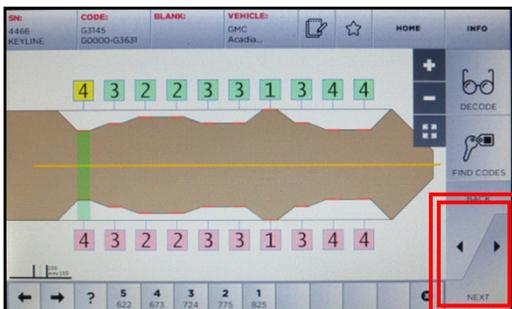

Key depths display, select **NEXT**

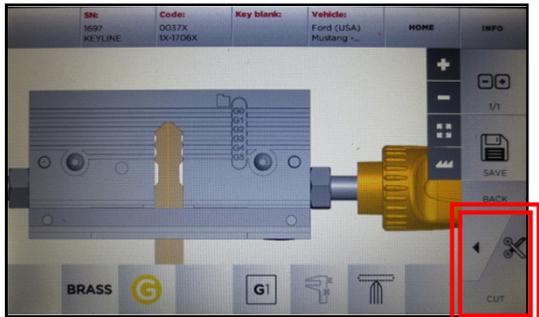


Select **CUT**

CUT BY CODE – EDGE CUT, cont.

SWITCHING TO G JAW FROM A/B/C/D JAWS


NOTE: Machine will recognize that the G jaw is not currently installed. Follow the machine prompts to change out the jaw and cutter to continue cutting by code.

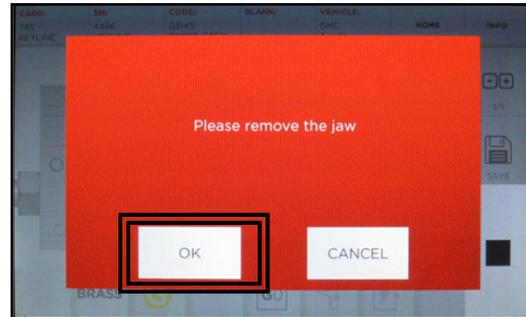


Remove current jaw, select **OK**




Install G Jaw

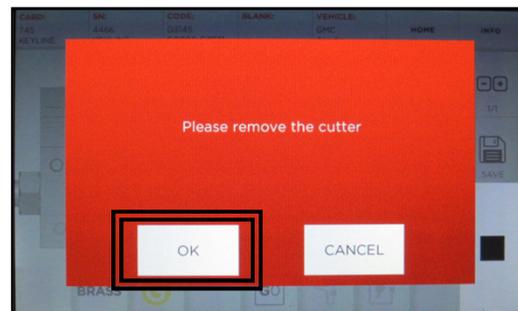


Remove 2.5mm installed cutter

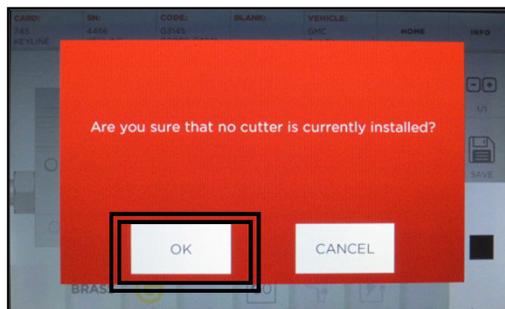

Confirm that cutter is removed

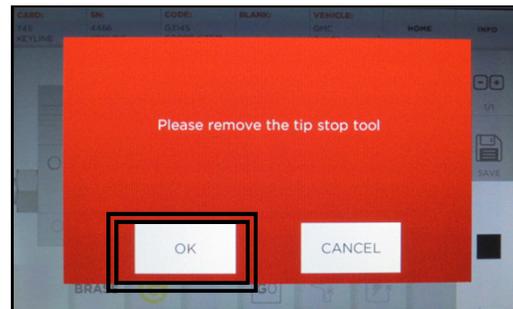

Remove tip stop (if applicable)

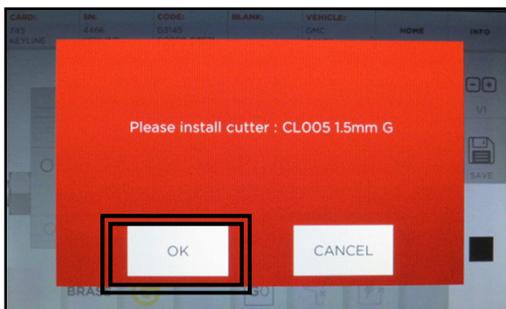


Install 1.5mm (CL005) cutter.
Once complete, select **OK**.


See Cutter Replacement section
(page 13) for details.

CUT BY CODE – EDGE CUT, cont.

SWITCHING TO G JAW FROM A/B/C/D JAWS

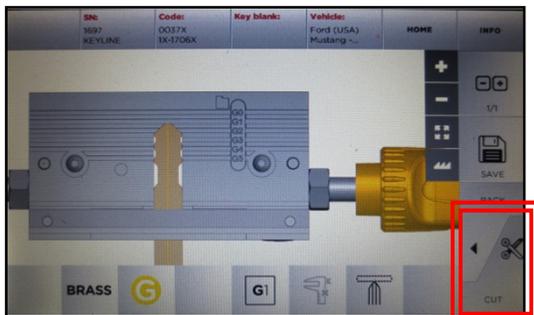

Insert key into jaw as far as possible but not past the back of the jaw. Hold key flat in jaw while tightening. Select **CUT**

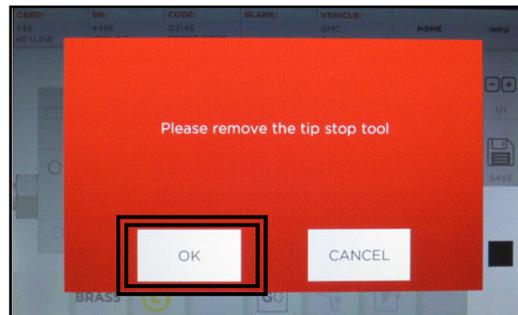


Select **OK**


Key cutting process will now begin. Follow standard cutting procedure.

CUT BY DECODE


Decode Metal Keys Only. Do Not Decode Plastic Keys.

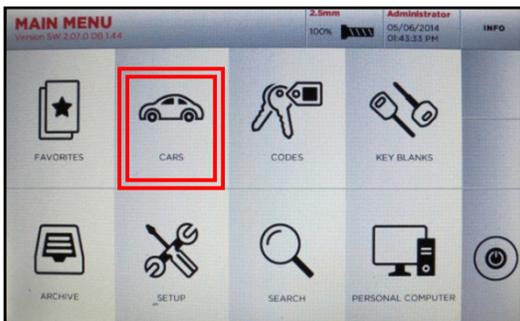

Select **CARS**

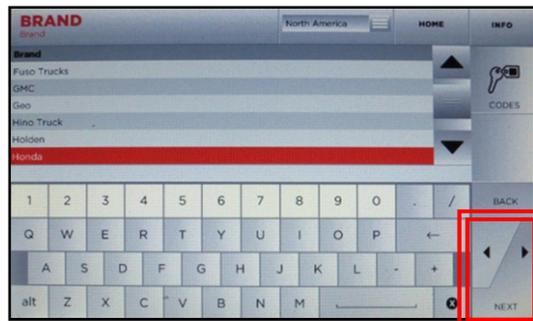


Select **MAKE (Brand)**, then **NEXT**

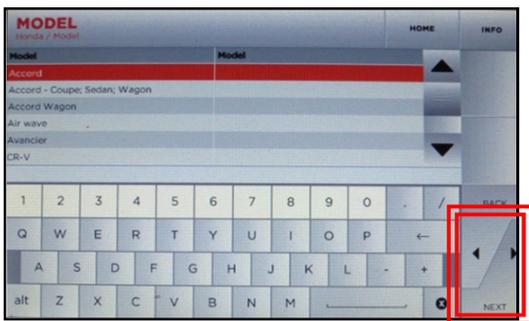


Select **MODEL**, then **NEXT**



Select **YEAR RANGE**, then **NEXT**

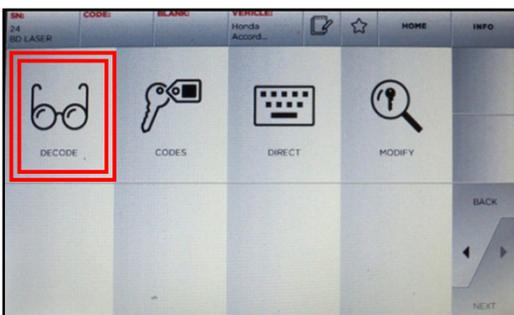


Select **DECODE**, then select **NEXT**

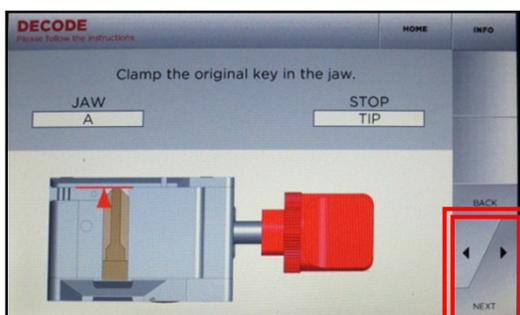


Insert key per screen instructions, Select **NEXT**

Continue


CUT BY DECODE, cont.

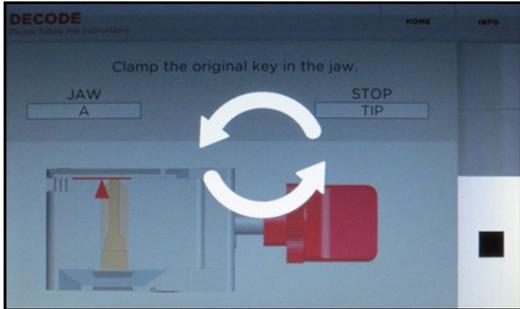


Decoding in process

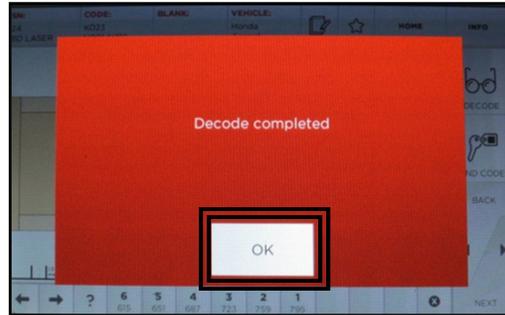


Decode completed, **select OK**

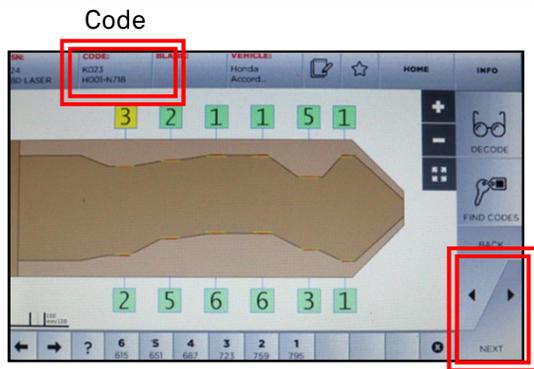


Key depths displayed. Verify that code is displayed, then select **NEXT**

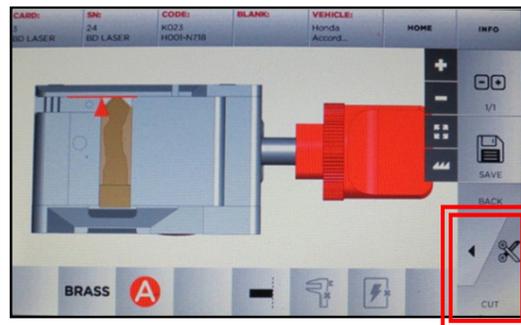

Place new key blank on jaw, then select **CUT**

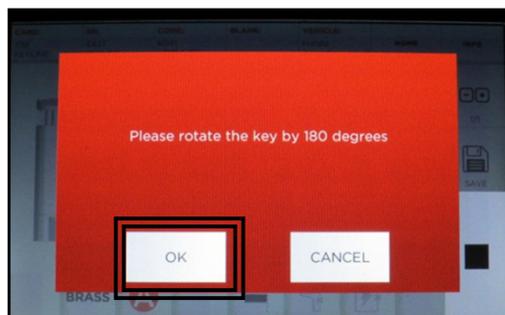


Rotate key for second side cutting, Select **OK**

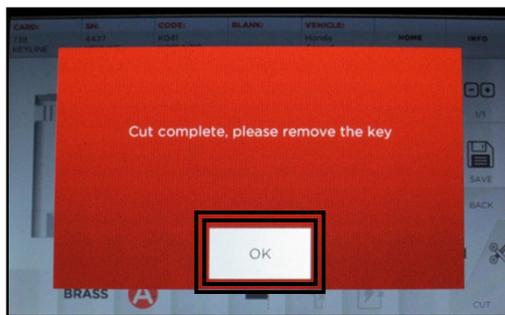

Key Cutting complete. Select **OK**.


CUTTER REPLACEMENT

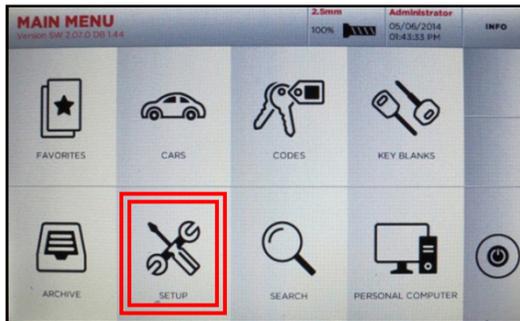


Select **SETUP**




Select **UTILITY**

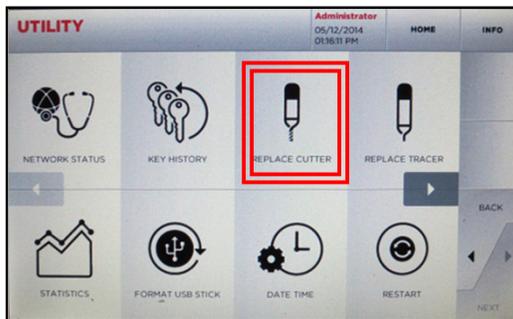

Select **REPLACE CUTTER**, make sure appropriate jaw is installed

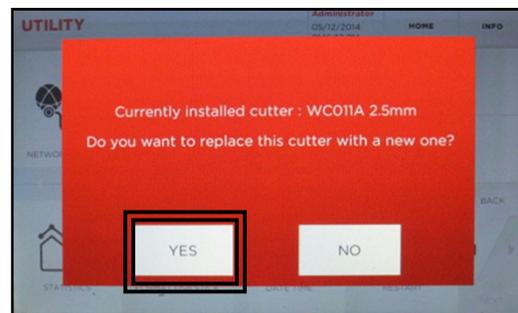

Current cutter installed displays, select **YES** to continue

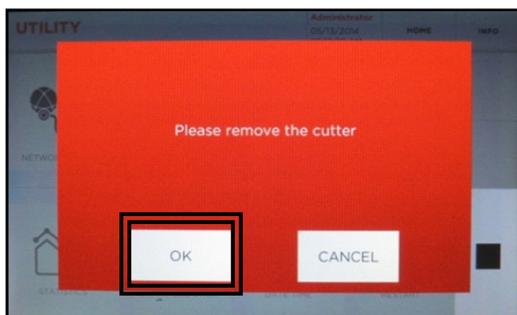


TO REMOVE CUTTER:


1. Insert red cutter removal tool in top of machine and rotate until it drops in position.
2. Press down to lock onto cutter.
3. Rotate until arrow on top red tool points left (9 o'clock position).
4. Insert long T-wrench into black collar on left side of cutter guard and loosen three turns. Leave wrench in place.
5. Remove red rod with cutter attached.
6. Remove old cutter from tool.
7. Select **OK** on screen.

Continue

CUTTER REPLACEMENT, cont.

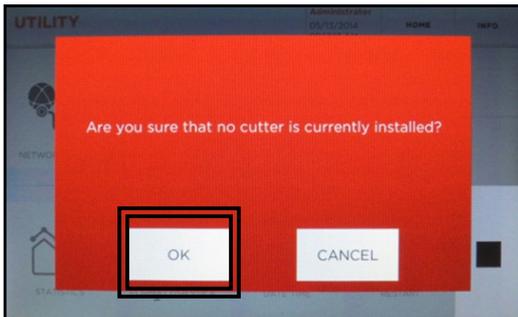


Confirm cutter removal, select **OK**. Jaw will move into position.

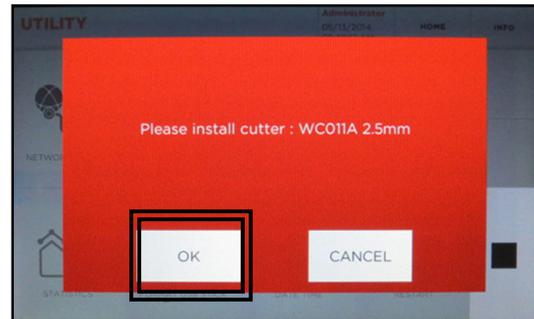

Install new cutter; see instructions below.

TO INSTALL NEW CUTTER:


1. Insert new cutter on red tool pressing in until cutter clicks into place.
2. Insert into hole on top of machine
3. Rotate until cutter rests lightly on the silver dot on the jaw and turn to 9 o'clock position before tightening
4. Tighten set screw with the long t-wrench
5. Remove t-wrench and red tool.
6. Select **OK** on screen.

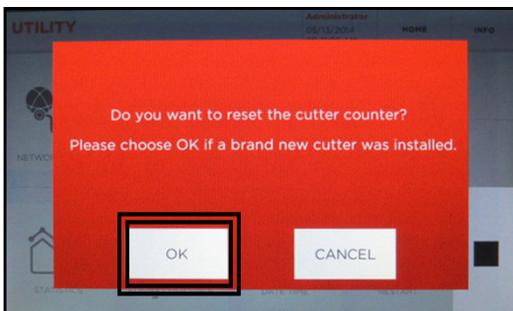

Select **OK** to reset cutter counter (only if cutter is brand new)

Select Home at top of screen to get to Main Menu.


TRACER REPLACEMENT

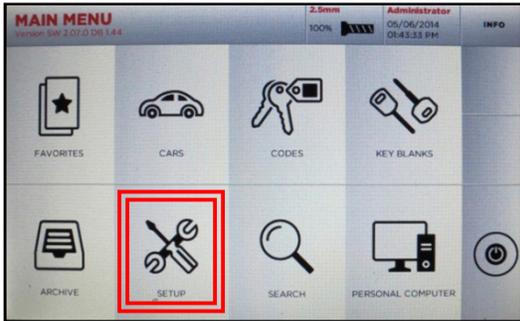


Select **SETUP**




Select **UTILITY**

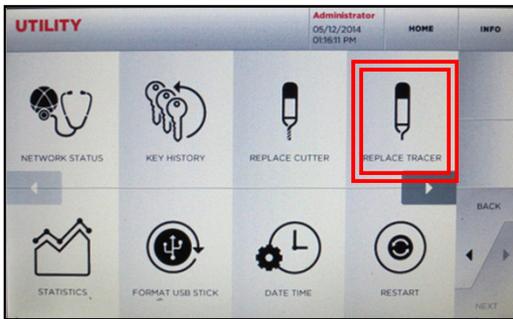


Select **REPLACE TRACER**

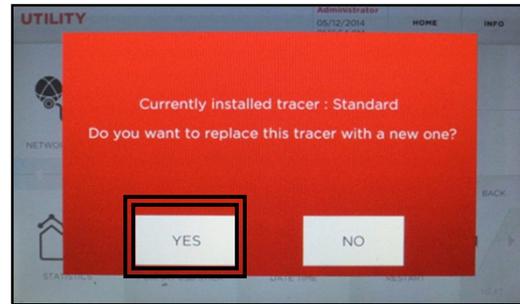

Current tracer installed displays, select **YES** to continue

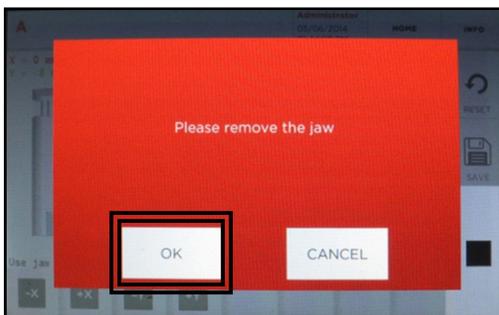


Remove jaw, then select **OK**

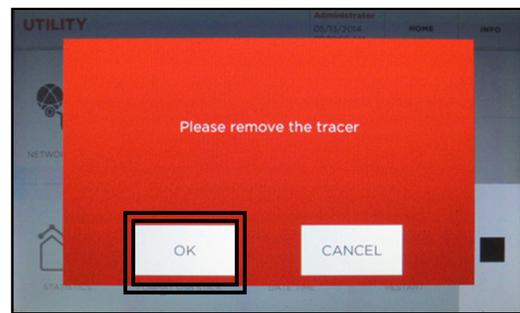

Remove tracer; **see instructions on page 16.**




TRACER REPLACEMENT, cont. 16


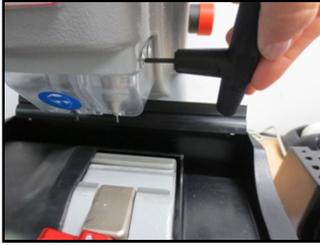


TO REMOVE TRACER:

1. Use short 2.5mm T-wrench to remove right side safety shield
2. Use 2.5mm short T-wrench to loosen tracer setscrew ½ a turn
3. Pull out tracer.
4. You may use pliers to remove tracer if it is bent or broken.

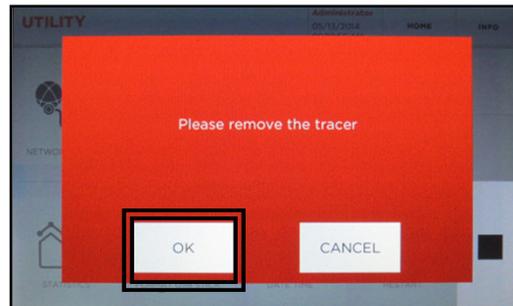

Select **OK** once tracer is removed

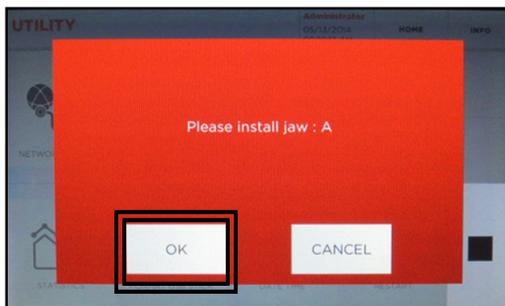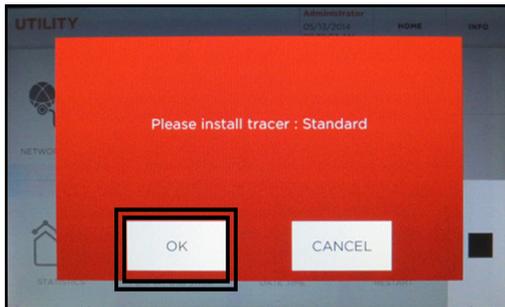


TO INSTALL NEW TRACER:

1. Install new tracer as far as it will go – you cannot go too far.
2. Be sure flat side of tracer is facing right to allow the set screw to seat properly.
3. Tighten set screw. **DO NOT OVER TIGHTEN.**
4. Re-install safety shield.
5. Select **OK** once tracer is successfully installed.
6. Install Jaw A, then select **OK**.
7. Proceed with **Jaw Setup** (see page 4) for instructions.

JAW SETUP – TIBBE (H)


REQUIRED ITEMS: H Jaw, Tibbe calibration template, original un-cut Tibbe blank, 2.5mm allen wrench

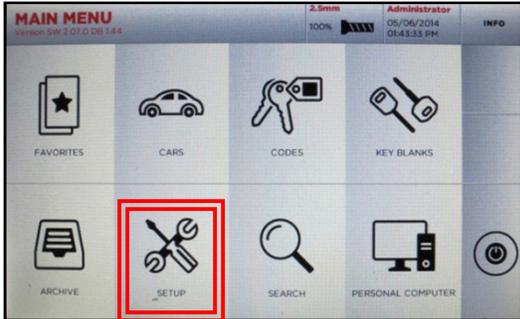


Select **SETUP**




Select **CALIBRATIONS**

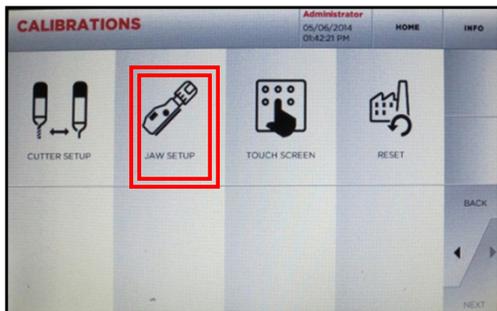


Select **JAW SETUP**

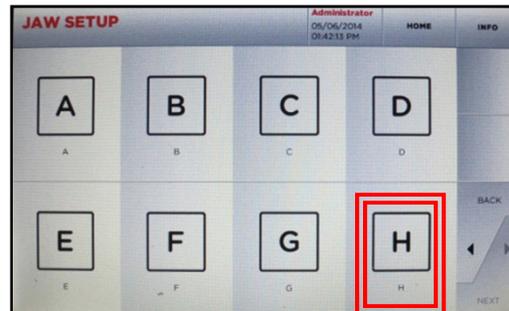


Select **H** jaw

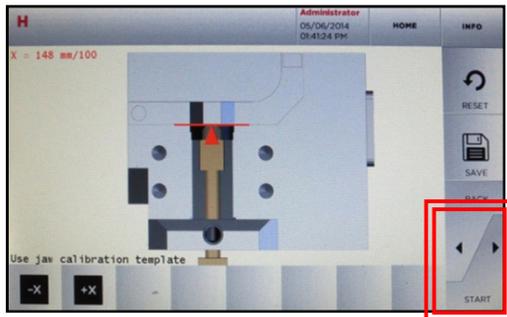

Select **START**

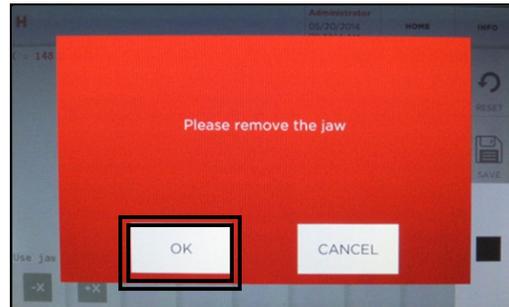


Remove current jaw, select **OK**

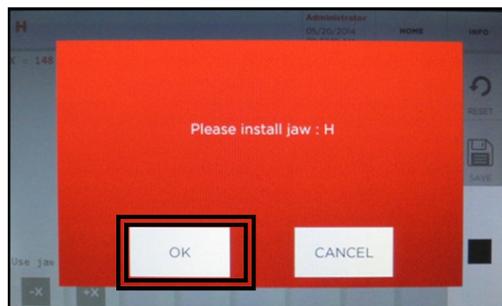




Install jaw **H**, then select **OK**




JAW SETUP – TIBBE (H), cont.

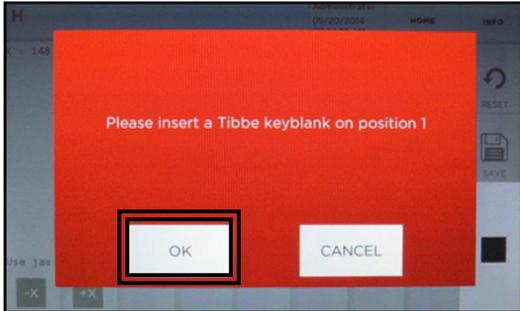


Insert a standard Tibbe key blank in jaw at **position 1** as shown in pictures

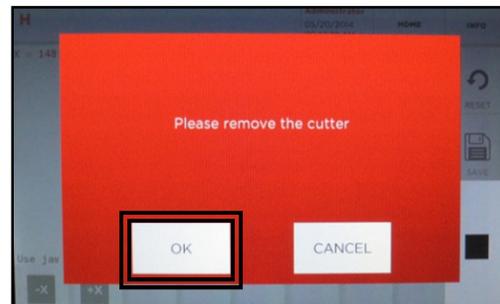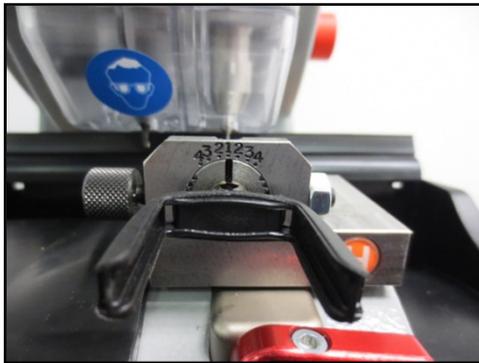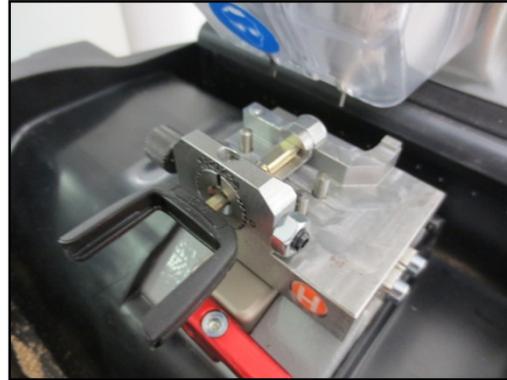


Remove the cutter, select **OK**

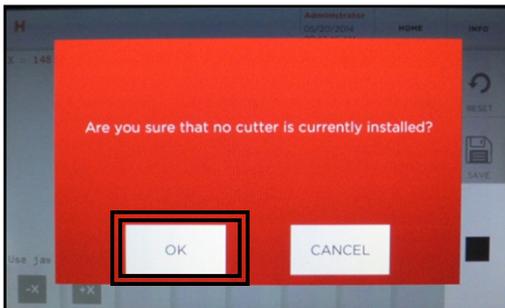

Confirm cutter removal, select **OK**
Jaw will move into position

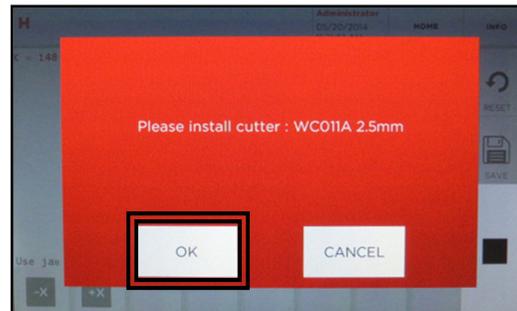


Install 2.5mm as shown in picture,
then select **OK**

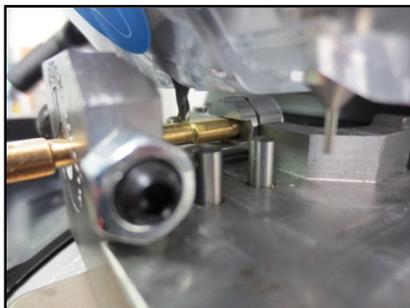


Install cutter until it drops down and rests on top of the Tibbe key blank. Tighten cutter set screw. Jaw will move into position after selecting **OK**.

Continue



JAW SETUP – TIBBE (H), cont.

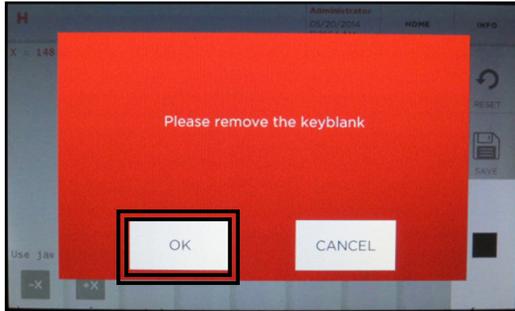

Remove key blank. Select **OK**.

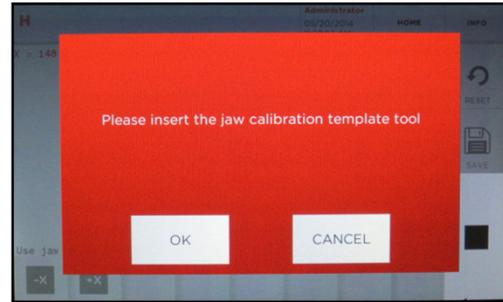

Insert Tibbe jaw calibration template (metal Tibbe template included with H Jaw). Insert template completely into jaw. Tighten front set screw with included Allen wrench.

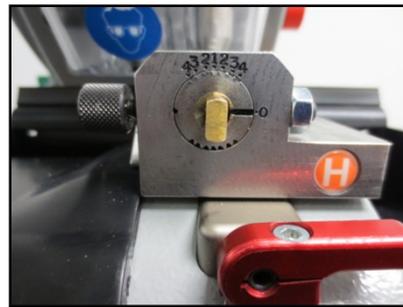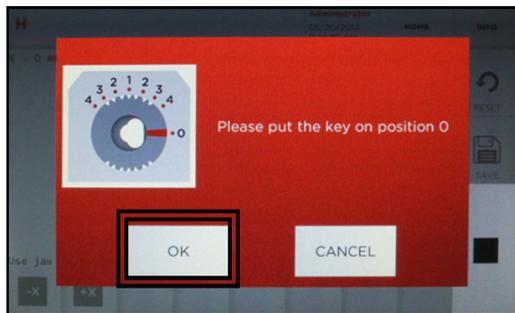

Turn template to position 0 (as shown in above picture) and tighten left side thumb wheel to lock in position. Select **OK** and jaw calibration will begin.




Once done, select **OK**.




Select **YES** to save calibration.

From this screen, select HOME to go to the Main Menu. You can now proceed to Cut by Code – Tibbe instructions on Page 20.


CUT BY CODE – TIBBE (H)

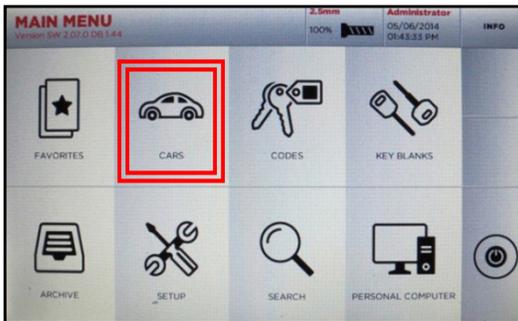


Select **CARS**

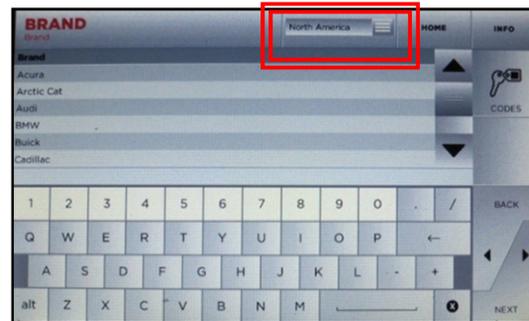


In the **BRAND** selection, go to drop down menu at the top

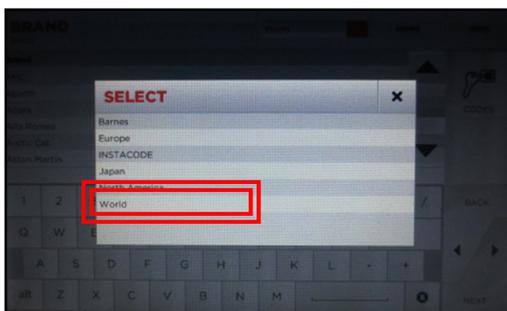

Select **WORLD**

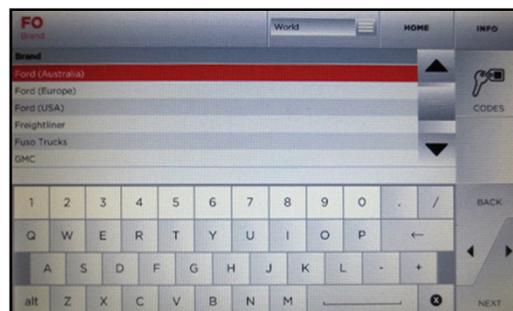


Select **Ford (Australia)** for Transit Connect

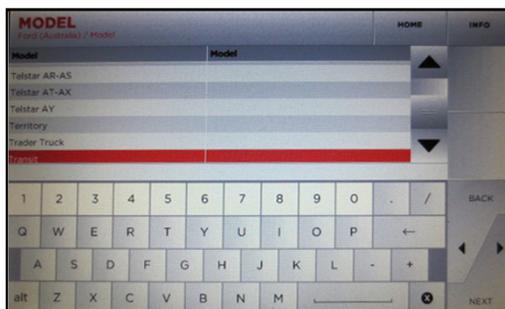

Select **MODEL** (i.e. Transit)




Select year range and press **NEXT**

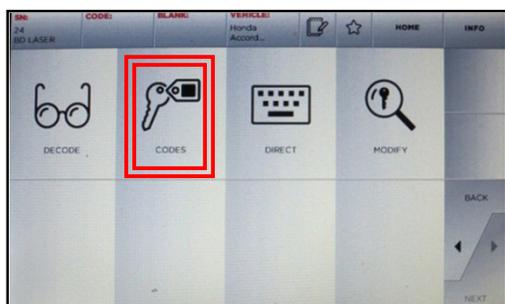


Select **CODES**, then **NEXT**




CUT BY CODE – TIBBE (H), cont. 21

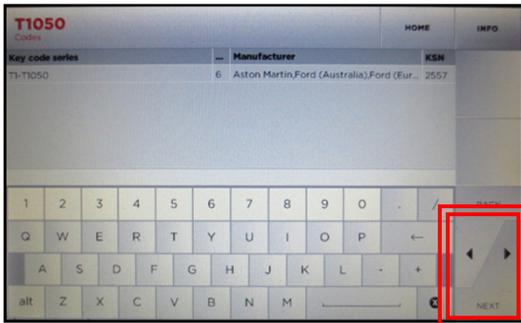


Enter Code, select **NEXT**

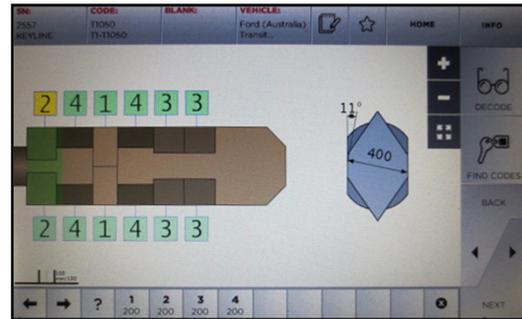

Key depths displayed, press **NEXT**

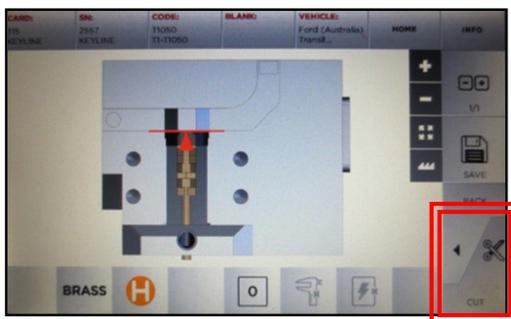



Insert Tibbe key blank on jaw in position 0, select **CUT**

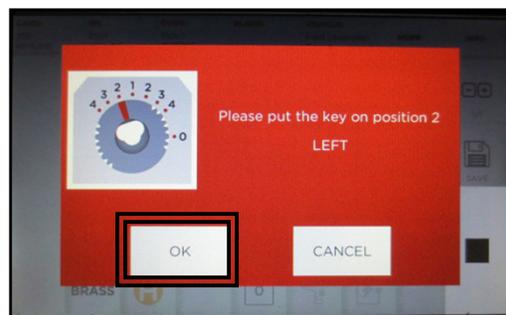


Turn key to displayed position and direction

Follow screen prompts until first side of key cutting is complete. **Machine will prompt to put key into position 1**, then select **OK**.

Rotate key 180 degrees when prompted and select **OK**. Follow prompts for second side key cutting.

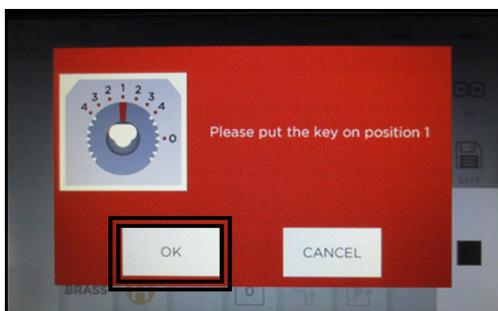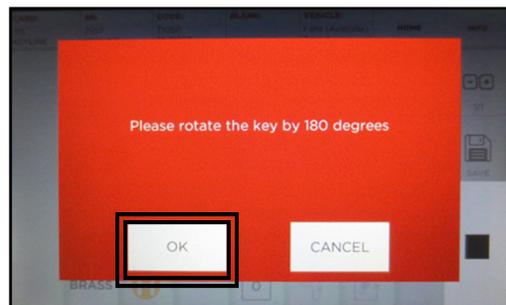

Turn key to position 1, select **OK**.

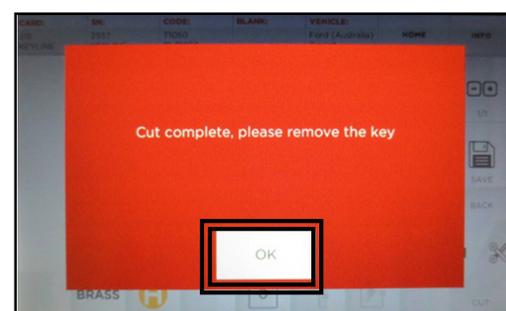


Select **OK** and remove key.

SOFTWARE UPDATE INSTRUCTIONS


SOFTWARE UPDATE VIA USB MEMORY STICK & KEYONLINE WEBSITE

WHAT YOU WILL NEED:

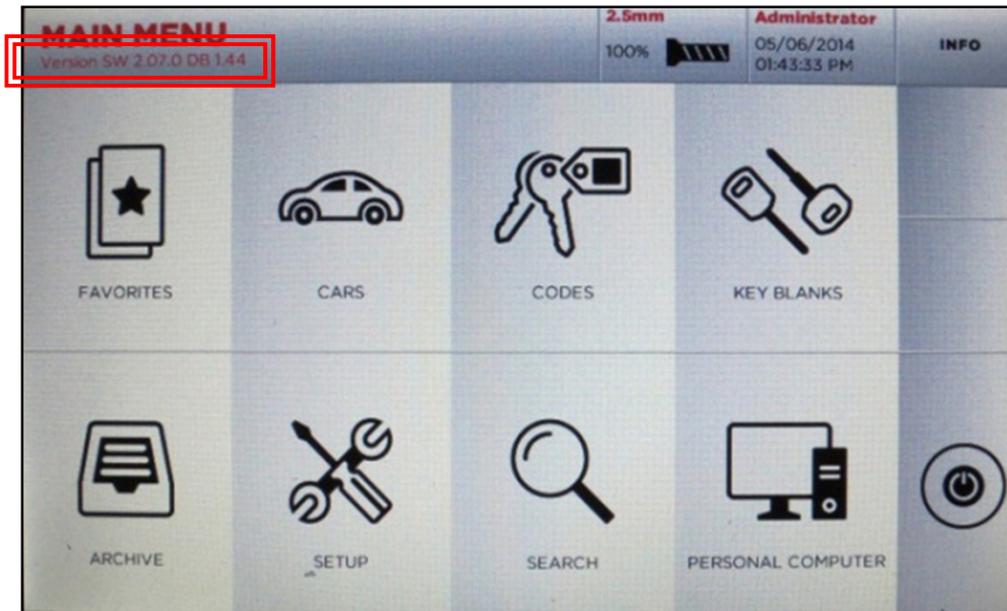

To check your current software version, see 'Version SW' below the Main Menu tab


STEP 1: Prepare USB Memory Stick with Update File

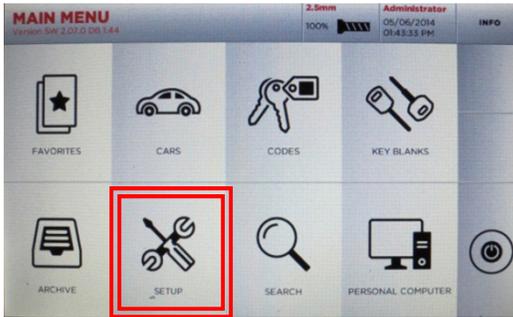


At **MAIN MENU**, select **SETUP**




At **SETUP MENU**, select **UPDATES**

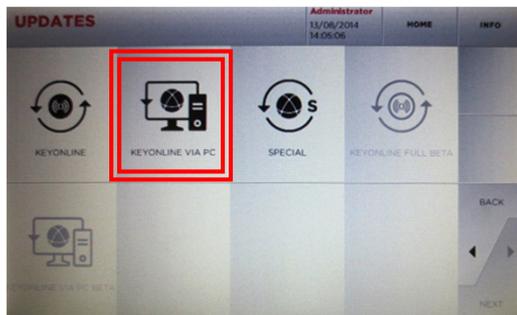

Then select **KEYONLINE VIA PC**

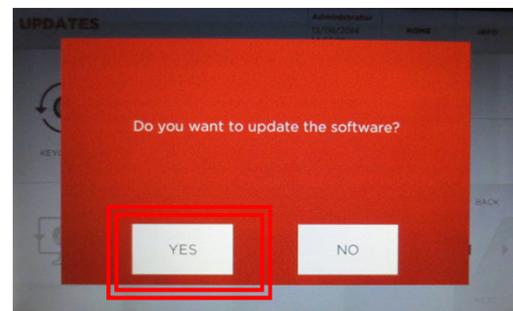


Select **YES** to Software Update

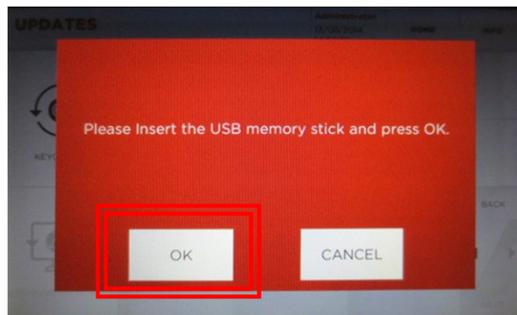


Insert USB Memory Stick, select **OK**



USB stick inserts on right side of console

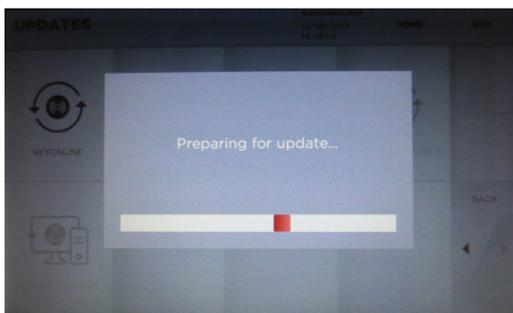

Console prepares software file

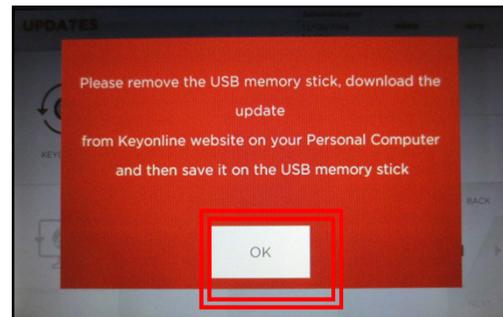


Remove USB stick, Select **OK**


STEP 2: Install Update File on USB from PC



Insert USB stick into USB port on PC then go to <http://keyonline.keyline.it>

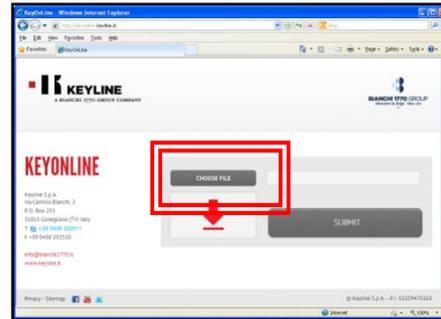


On site, double-click **CHOOSE FILE**

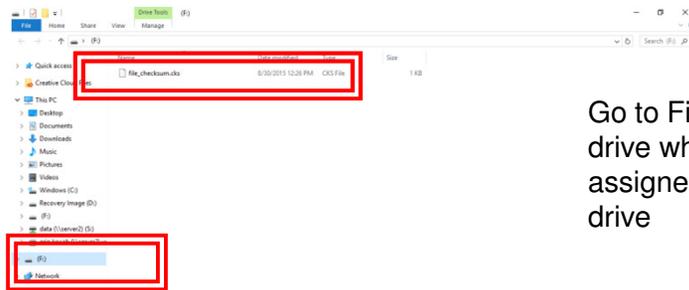

Go to File Explorer, locate the drive where the USB stick is assigned and double-click the drive


Highlight the '.cks' file listed and click **OPEN**

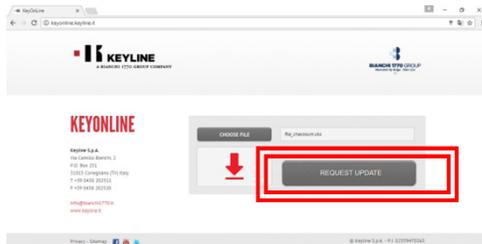

The '.cks' file now appears in the box on the Keyonline site, then click **REQUEST UPDATE**

A pop-up box will appear that says **"This action may take some time"**


Click **OK** when this message appears

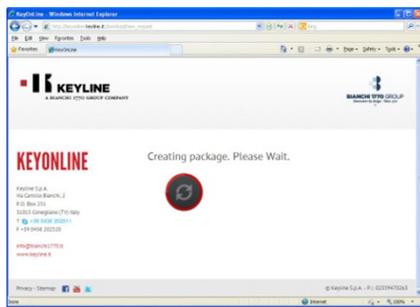


Software package creation will begin. This take up to a few minutes depending on your Internet speed.

STEP 2, cont: Install Update File on USB from PC

25

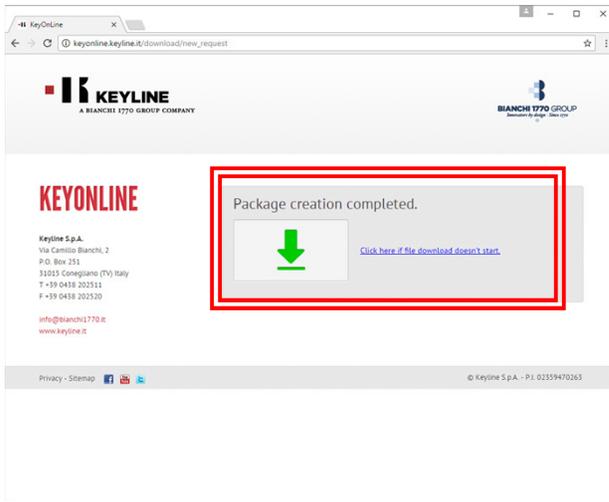

Package creation completed should appear. You will be prompted with a pop up at the bottom of the screen, that shows the downloaded file. Click on the drop down arrow to the right of the download file and select **OPEN IN FOLDER**

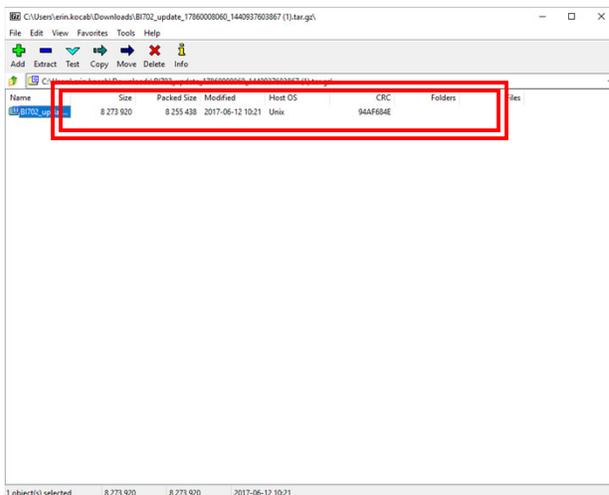


Once you have the downloaded file folder up, locate the USB drive with the original file you downloaded from the 994 console. Drag the new file that you created from Keyonline to the USB drive (NOTE: Do not extract the file – just drag and drop). The file will begin downloading to the USB stick.


Once the update file has finished installing you will then have two items on your USB stick. The original .cks file you downloaded from the USB and the file you downloaded from Keyonline.

Safely eject the Removable Disk from your drive. To eject, right click on the drive letter and select Eject. You can now take the USB memory stick back to your console to complete the software update.


STEP 3: Complete Software Installation on Console

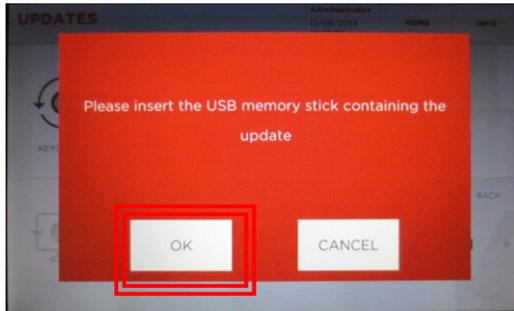




Insert USB into console and select **OK**

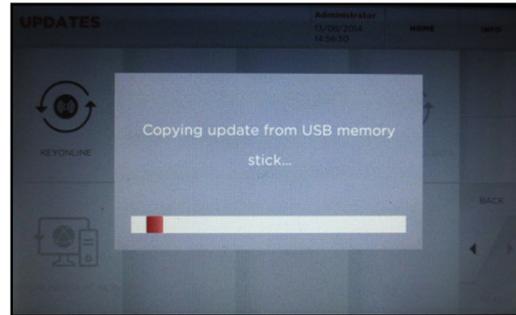


Update begins

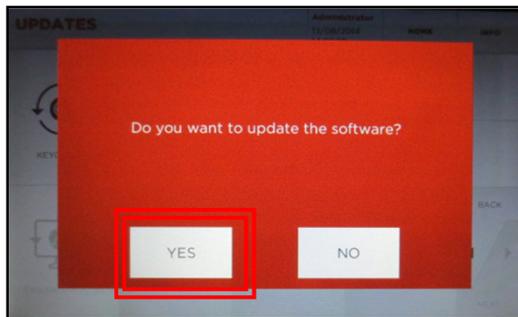


Select **YES** to confirm update

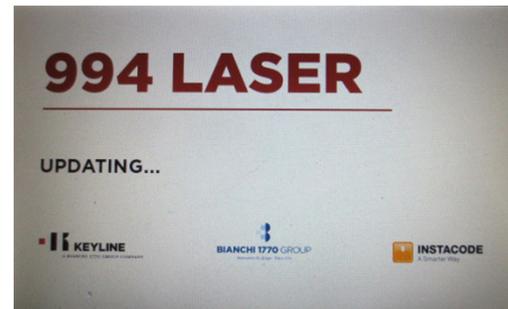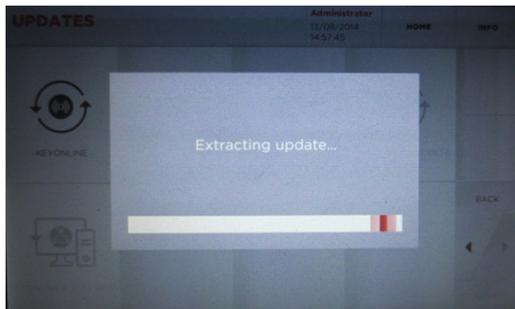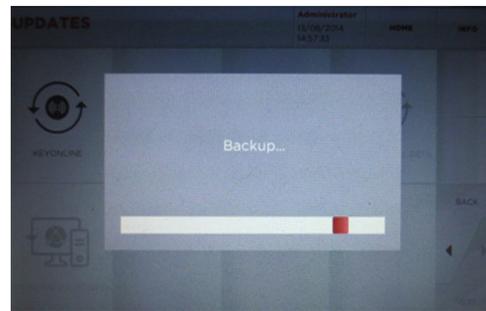

Machine will re-boot and power back up as update continues

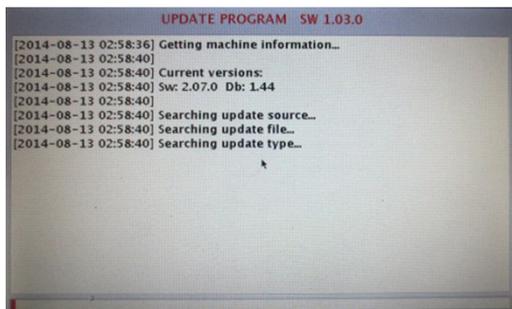

Update continues; progress bar on bottom

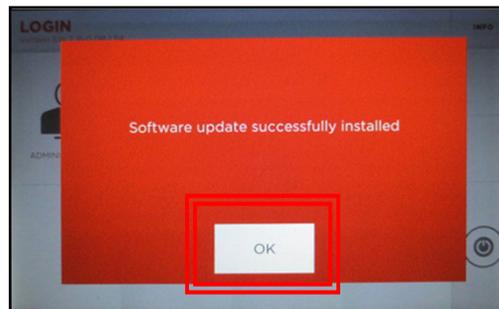

Update successful; select **OK**

994 LASER SPARE PARTS

27

Description	Part Number
Universal 2.5mm cutter (WC011A)	B3320
1.5mm cutter – (G Jaw - Edge Cut – CL005)	RIC09617B
Universal Tracer (TL003)	RIC09483B
Magnetic Tip Stop (for F & G Jaw)	B3405
Plunger Tool	B3315
Cutter setup blanks (5pk)	B3319
Jaw calibration template	B3354
"A" Clamp - Red	B3311
"B" Clamp - Gray	B3312
"C" Clamp - Green	B3313
"D" Clamp - Blue	B3314
"G" Clamp Kit – Yellow (Jaw, Magnetic Tip Stop, 1.5mm Cutter and Tracer)	OPZ09486B
"H" Clamp - Orange	OPZ09523B
Fan Filter	B3326
Infiniti Adaptor (AD02)	B3352
Lexus 80K Adaptor (AD03)	B3379
Ducati/Aprilia/Guzzi Adaptor (AV08)	OPZ09329B
Infiniti Adaptor (AD05)	OPZ10269B
Anti-glare console screen protector	B9979
3mm T-wrench (Long)	B3316
2.5mm T-wrench (Short)	B3317
Automatic Vacuum Attachment	B3318
4GB USB Flash Drive for Software Updates	PROMO12-015